



Datasheet

CXD09P02

Rev. 1.3

Contents

1. KEY FEATURES.....	3
2. APPLICATIONS.....	3
3. GENERAL DESCRIPTIONS	3
4. ELECTRICAL SPECIFICATIONS	3
5. PORT CONFIGURATIONS.....	4
6. OUT DIMENSION	4
7. POWER DERATING CURVE	5
8. RF PERFORMANCE CURVES: Return Loss (-55 °C, 25 °C, and 125 °C)	6
9. RF PERFORMANCE CURVES: Amplitude Balance, Insertion Loss, Isolation, and Phase Balance (-55 °C, 25 °C, and 125 °C).....	7
10. RF TEST METHODS	8
10.1 RF TEST PROCEDURES	8
10.2 RN2 TEST BOARD LAYOUT	11
10.3 AUTOMATIC PORT EXTENSIONS (APE) FUNCTION	11
11. RECOMMENDED PCB LAYOUT AND SOLDER MASK PATTERN	12
12. SOLDERING PROCESS	13
13. REFLOW PROFILE	14
14. PACKAGING AND ORDERING INFORMATION	15
15. HANDLING GUIDE.....	16
16. LEGAL INFORMATION	17


2-Way Divider

with High-Power Capacity and Stable Performance based on RN2 LTCC Multilayer Technology

Model Name: CXD09P02

1. KEY FEATURES

- Excellent high-power capacity up to average 2 watts
- Excellent stable performance at different temperatures
- Low insertion loss based on a LTCC base ($\epsilon_r = 5.95$), high conductivity metal conductor (Ag), and gold (Au) plating
- Surface mount type
- RoHS compliance (Pb-Free)

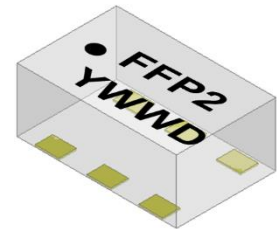

2. APPLICATIONS

- Applications using GSM, UMTS, and LTE
- RF amplifiers
- Communications equipment

3. GENERAL DESCRIPTIONS

The CXD09P02 is a 2-way divider with high-power capacity and stable performance in different temperatures. The LTCC, high conductivity metal conductor (Ag), and gold (Au) plating enable the CXD09P02 to minimize insertion loss and improve durability for thermal stabilization and electricity.

The CXD09P02 is suited for applications using GSM, UMTS, LTE, communications equipment, requiring low insertion loss and high power.

The CXD09P02 supports up to average 2 watts. It is a SMD type product enabling Pb-Free solder and meets RoHS-6.

4. ELECTRICAL SPECIFICATIONS

Frequency (MHz)	Amplitude Balance Max.(dB)	Isolation Min.(dB)	Insertion Loss Max.(dB)
700 – 800 800 – 1000	± 0.30	10 16	0.50
Return Loss Min.(dB) Input / Output	Phase Balance (Degree)	Power Capacity Avg.(Watt)	Operating Temperature(°C)
10 / 18 14 / 20	± 1.0	2	-55 ~ 125

NOTE: These electrical specifications are measured by using a RN2 test board.
Specifications subject to change without notice.

5. PORT CONFIGURATIONS

Figure 1 shows the locations of the CXD09P02 ports. The orientation marker is included to represent port 1.

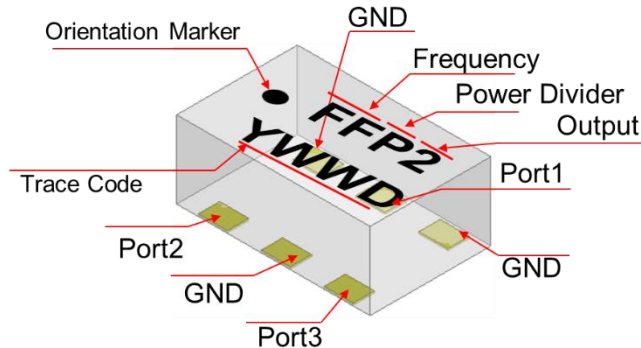



Figure 1. CXD09P02 (Top View)

CXD09P02 port configuration is defined as table1.

Table 1. CXD09P02 Port Configurations

Configuration	Port 1	Port 2	Port 3
Case 1.	Input	Output1	Output2

6. OUT DIMENSION

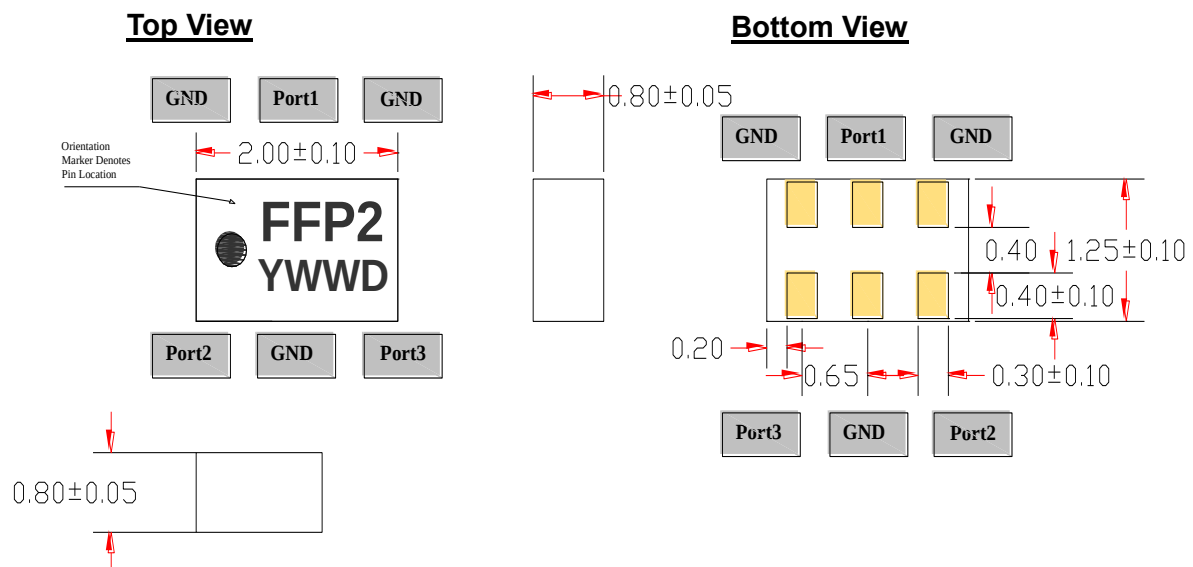

- Unit: mm
- Weight: 0.01 grams
- Camber specifications: Less than 0.08 mm

7. POWER DERATING CURVE

Figure 2 shows the maximum allowable average power (Maximum input power, CW) of the CXD09P02 depending on base PCB temperature changes. The maximum allowable average power of the CXD09P02 is limited by the following power derating curve.

The CXD09P02 factors that determine the power derating curve are as follows:

- Internal circuit
- Thickness
- Thermal conductivity of materials
- Insertion loss
- Operating temperature
- Mounting interface temperature between the CXD09P02 and the base PCB

The maximum operating temperature of the CXD09P02 is 125 °C. Therefore, when the base PCB temperature is over 125 °C, the CXD09P02 operates stably by decreasing its durable average input power. When the base PCB temperature reaches 200 °C, the maximum allowable average power decreases to 0 watt.

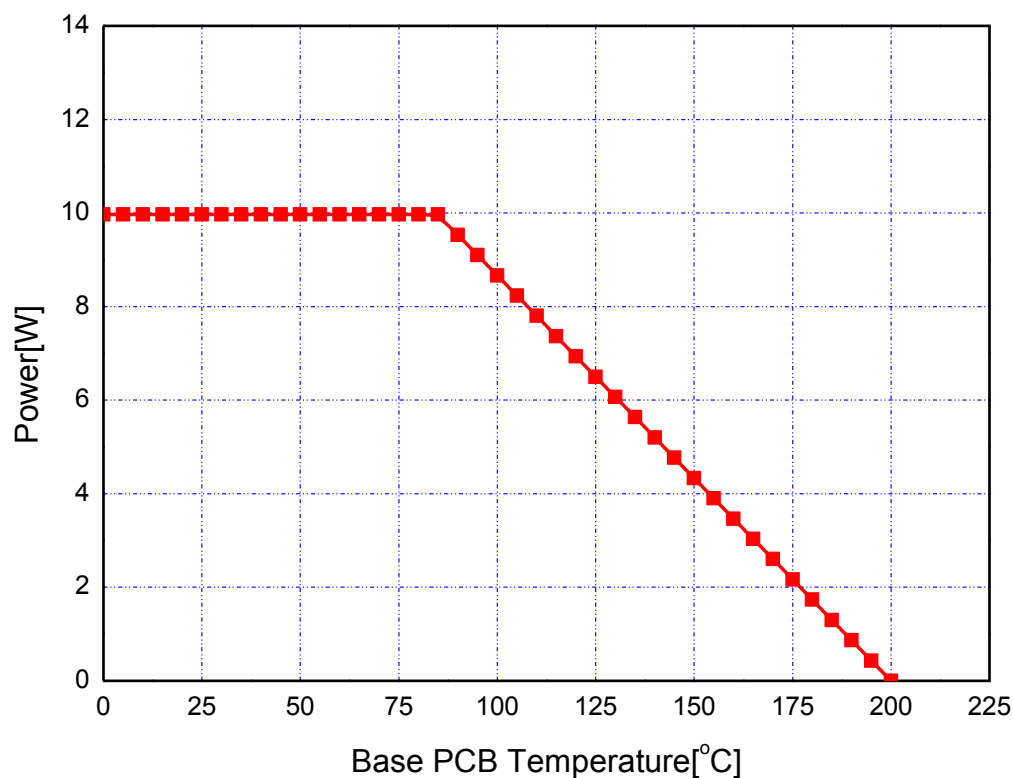


Figure 2. Power Derating Curve

8. RF PERFORMANCE CURVES: Return Loss (-55 °C, 25 °C, and 125 °C)

Figure 3 shows the test plots of the return loss for the CXD09P02. There are few variations for the specified frequencies and temperatures.

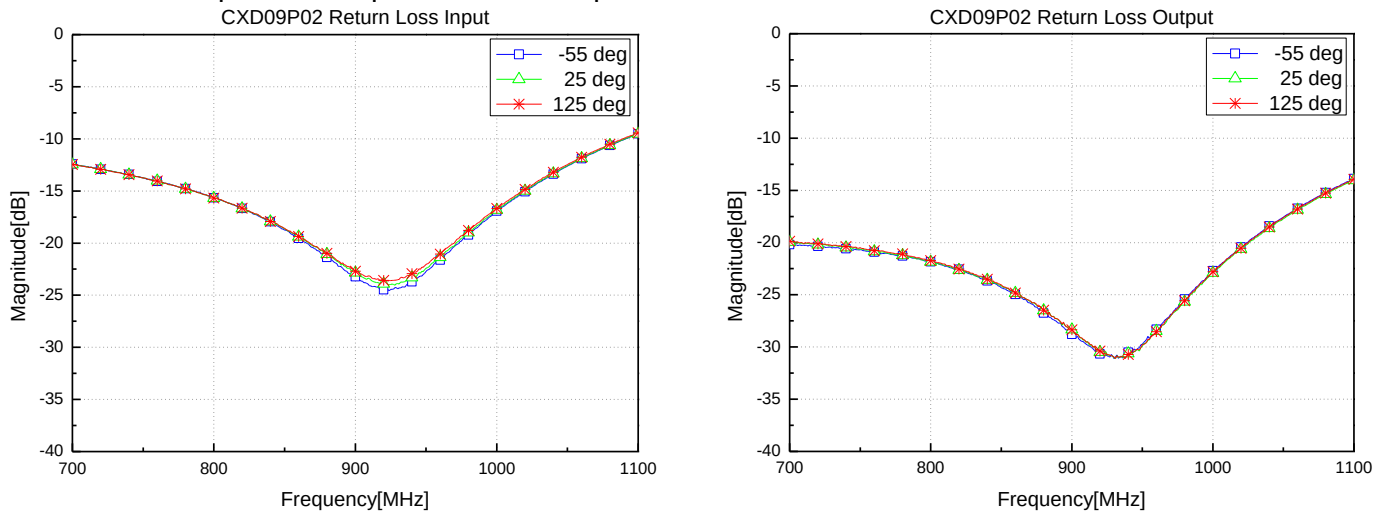


Figure 3. Test Plots of Return Loss (-55 °C, 25 °C, and 125 °C)

9. RF PERFORMANCE CURVES: Amplitude Balance, Insertion Loss, Isolation, and Phase Balance (-55 °C, 25 °C, and 125 °C)

Figure 4 shows the test plots of the insertion loss, isolation, amplitude balance, and phase balance for the CXD09P02. There are few variations for the specified frequencies and temperatures. These test plots result from the Case 1 configuration in 'Table 1. CXD09P02 Port Configurations'. See '[PORT CONFIGURATIONS](#)' for more details.

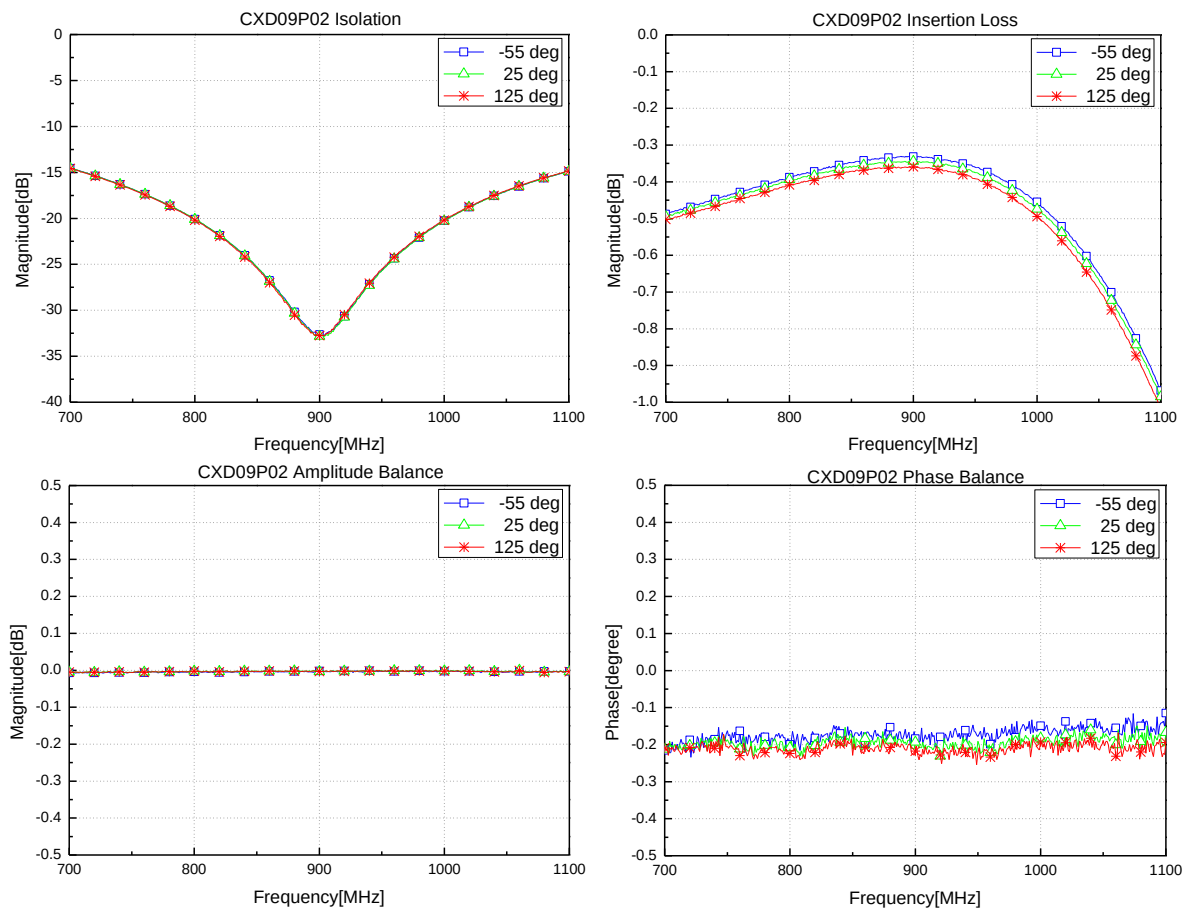


Figure 4. Test Plots of Coupling and Transmission Loss, Insertion Loss, Isolation, and Phase Balance (-55 °C, 25 °C, and 125 °C)

10. RF TEST METHODS

This section describes how to test the CXD09P02 RF performance. To ensure s-parameters reliability, we follow our internal test procedures by using the RN2 bare test board, RN2 test board, Vector network analyzer, and test fixture. In addition, we use the Automatic Port Extensions (APE) function of the Vector network analyzer to obtain accurate s-parameters.

Check the following sections for more details:

- RF TEST PROCEDURES
- RN2 TEST BOARD LAYOUT
- AUTOMATIC PORT EXTENSIONS (APE) FUNCTION

10.1 RF TEST PROCEDURES

To test the CXD09P02 RF performance, we perform the following steps:

1. Preparing the Test Equipment
2. Performing the Automatic Port Extensions (APE) Function of the Vector Network Analyzer
3. Measuring the S-parameters (Isolation, and Return Loss)
4. Obtaining the Characteristic Parameters (Amplitude Balance, Isolation, Insertion Loss, Return Loss, and Phase Balance)

STEP 1: Preparing the Test Equipment

The following test equipment is prepared to test the CXD09P02 RF performance.

- RN2 bare test board
- RN2 test board
- Vector network analyzer
- Test fixture

NOTE: See '[RN2 TEST BOARD LAYOUT](#)' for the RN2 test board details.

STEP 2: Performing the Automatic Port Extensions (APE) Function of the Vector Network Analyzer

The APE function is used with the RN2 bare test board to correctly check the CXD09P02 RF performance. This reduces or eliminates both electrical delay and insertion loss of the test fixture.

The detailed steps are as follows:

1. Place the RN2 bare test board on the test fixture.
2. Click the **Cal** button of the Vector network analyzer to calibrate it.
3. Connect the three ports of the test fixture into the three ports of the Vector network analyzer.
4. Click the **Port Extensions** button of the Vector network analyzer to measure the data of the RN2 bare test board.

NOTE: See '[AUTOMATIC PORT EXTENSIONS FUNCTION](#)' for more details.

STEP 3: Measuring the S-parameters (Coupling, Transmission Loss, Isolation, and Return Loss)

After performing the APE function, the CXD09P02 s-parameters are measured through the following steps:

1. Place the RN2 test board on the test fixture.
2. Apply pressure to the test fixture using a pneumatic piston.
3. Connect the four ports of the test fixture into the four ports of the Vector network analyzer.
4. Set port1 as Case 1 configuration in 'Table 1. CXD09P02 Port Configurations'.
5. Calibrate the Vector network analyzer.
6. Measure the isolation value from port 2 to port 3 (S32).
7. Measure the return loss value from port 1 to port 1, port 2 to port 2, and port 3 to port 3 respectively (S11, S22, and S33).

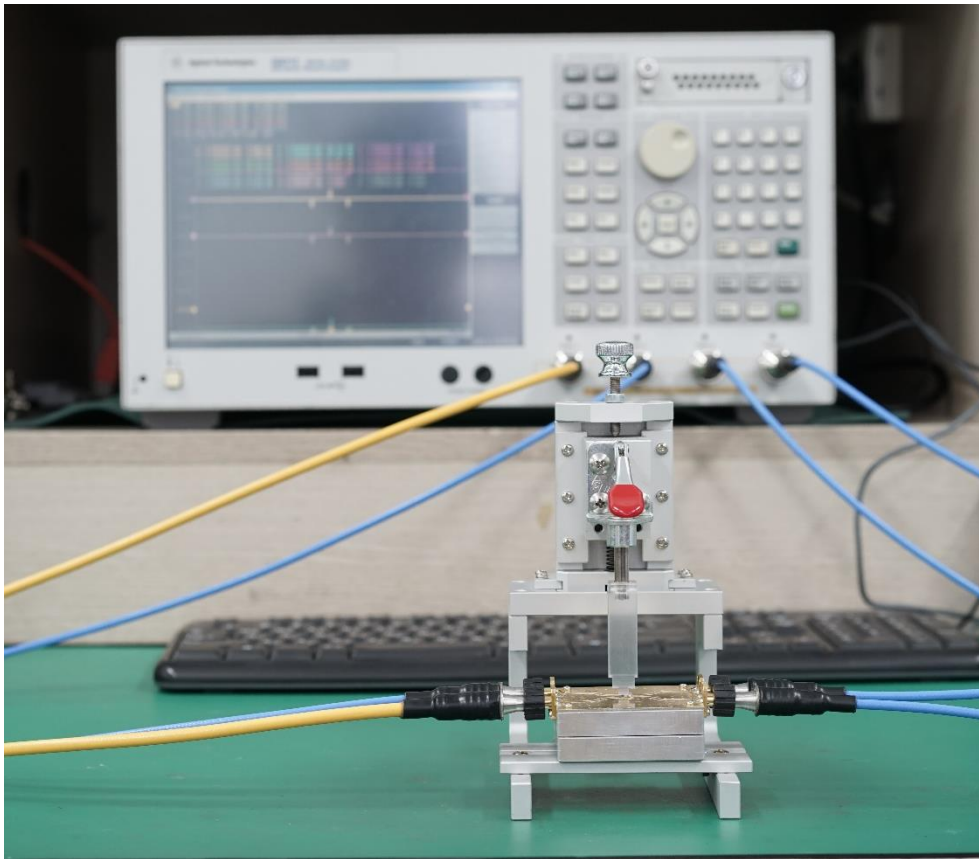


Figure 5. Test Setting to Measure the CXD09P02 S-parameters

STEP 4: Obtaining the Characteristic Parameters (Amplitude Balance, Isolation, Insertion Loss, Return Loss, and Phase Balance)

The s-parameters are calculated by using the formula in **Table 2** to obtain the characteristic parameters, such as amplitude balance, isolation, insertion loss, return loss, and phase balance.

Table 2. Mathematical Formula for the CXD09P02 Parameters

Parameter	S-Parameter	Power Method
Insertion Loss	-	$10 \cdot \log \left(\frac{P_{in}}{P_{out1} + P_{out2}} \right)$
Isolation	S32	$10 \cdot \log \left(\frac{P_{iso}}{P_{in}} \right)$
Return Loss	S11 S22 S33	$10 \cdot \log \left(\frac{P_{in}}{P_{back}} \right)$
Amplitude Balance	-	$10 \cdot \log \left(\frac{P_{out1}}{\frac{P_{out1} + P_{out2}}{2}} \right)$
Phase Balance	S21 S31	Phase _(S21) - Phase _(S31)

NOTE

- P_{in} : Power of Input Port
- P_{out} : Power of Output Port
- P_{back} : Return Power of Input Port

10.2 RN2 TEST BOARD LAYOUT

Figure 6 shows the RN2 test board layout used for testing the CXD09P02 RF performance. The RN2 test board is based on the Taconic RF35 board with the dielectric constant of 3.5, board thickness of 0.8 mm, and copper of 1 Oz.

We recommend that you use the same material and design layout, as shown in **Figure 6**, to meet the specifications in this datasheet. However, if you use different materials, you must follow the basic guidelines. See [‘RECOMMENDED PCB LAYOUT AND SOLDER MASK PATTERN’](#) for more details.

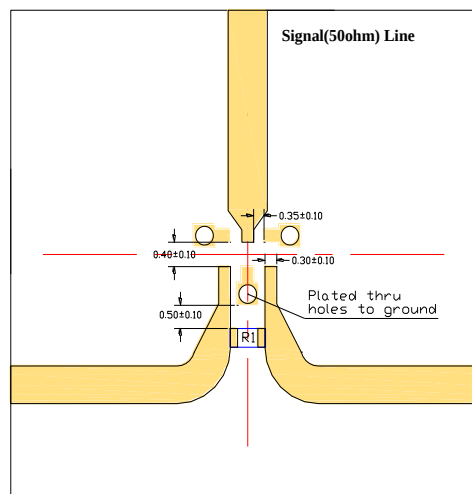


Figure 6. RN2 Test Board Layout

10.3 AUTOMATIC PORT EXTENSIONS (APE) FUNCTION

To accurately measure the CXD09P02 s-parameters, we use the Automatic Port Extensions (APE) function of the Vector network analyzer. The APE function is used for reducing or eliminating both electrical delay and insertion loss of test fixtures. It provides a convenient, automated way to calculate the insertion loss and electrical delay terms by a simple measurement of an open or short circuit, which is easy to do in test fixtures.

We consider the transmission lines of the RN2 bare test board as extensions of the coaxial test cables that are between the Vector network analyzer and the CXD09P02. With the APE function, we extend the coaxial test ports so that our calibration plane is right at the terminals of the CXD09P02, and not at the connectors of the RN2 bare test board.

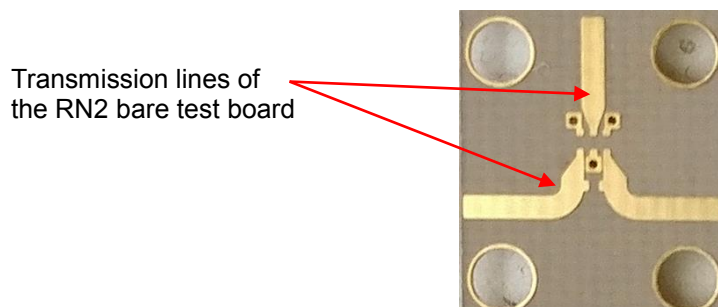


Figure 7. Performing the APE Function Test

11. RECOMMENDED PCB LAYOUT AND SOLDER MASK PATTERN

Figure 8 shows the recommended PCB layout and solder mask pattern to meet the specifications in this datasheet. When you use different materials other than the RN2 test board, you must follow the basic guidelines at minimum.

Basic Guidelines

- Place GND more than 30% of the CXD09P02 GND dimension regardless of a via size.
- Appropriately increase via sizes and numbers to allow low impedance ground connection and good thermal conductivity.
- Align the CXD09P02 ground plane with the solder to have good connection to ground.
- Fill the via holes under the CXD09P02 with the solder for thermal emission.

NOTE: Contact the RN2 Technologies sales team for more detailed PCB layout and solder mask pattern information.

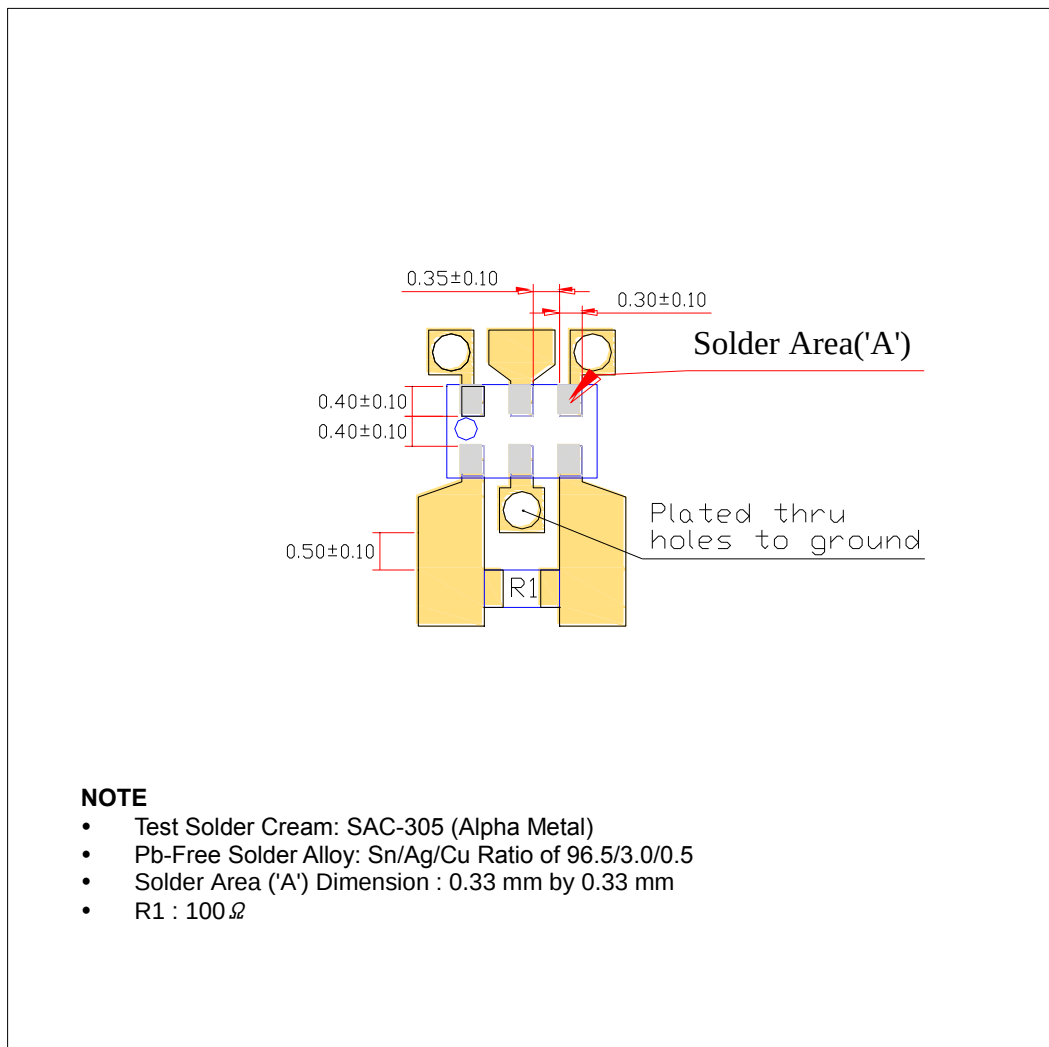


Figure 8. Recommended PCB Layout and Solder Mask Pattern

12. SOLDERING PROCESS

The CXD09P02 soldering steps are as follows:

1. Cleaning the PCB
2. Applying solder paste to the PCB
3. Placing the CXD09P02 on the PCB
4. Reflowing the CXD09P02 to the PCB
5. Cleaning and inspecting the soldered PCB with the CXD09P02

STEP 1: Cleaning the PCB

Carefully clean the PCB surface where the CXD09P02 is soldered.

Particles must not be placed on the PCB surface where the CXD09P02 is soldered.

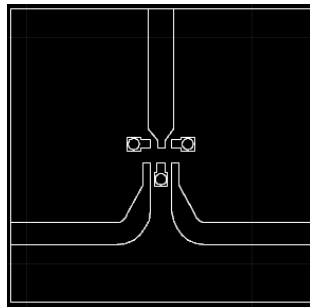


Figure 9. Cleaning the PCB Surface Where the CXD09P02 is Soldered

STEP 2: Applying the Solder Paste to the PCB

Apply the solder paste to the 6points on the PCB surface.

It enables good thermal conductivity because the CXD09P02 is firmly attached to the PCB surface without air.

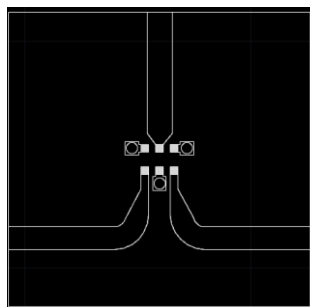


Figure 10. Applying the Solder Paste to the 6Points on the PCB Surface

STEP 3: Placing the CXD09P02 on the PCB

Correctly place the CXD09P02 on the 6points of the PCB surface.

Applying the solder paste to the 6points helps you firmly attach the CXD09P02 to the PCB surface.

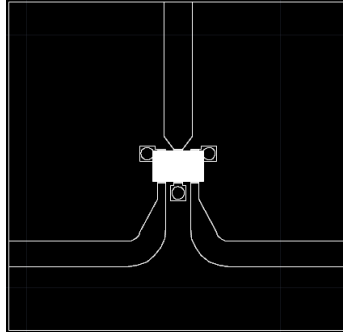


Figure 11. Placing the CXD09P02 on the 6Points of the PCB Surface

STEP 4: Reflowing the CXD09P02 to the PCB

We recommend both manual soldering and PCB surface pre-heating methods when reflowing the CXD09P02 to the PCB surface. Be careful NOT to touch the iron tip to the CXD09P02 when you use the manual soldering method.

See [REFLOW PROFILE](#) for more details.

13. REFLOW PROFILE

Figure 12 shows the thermal reflow profile of the SAC-305 (Alpha metal), which is a test solder cream we used.


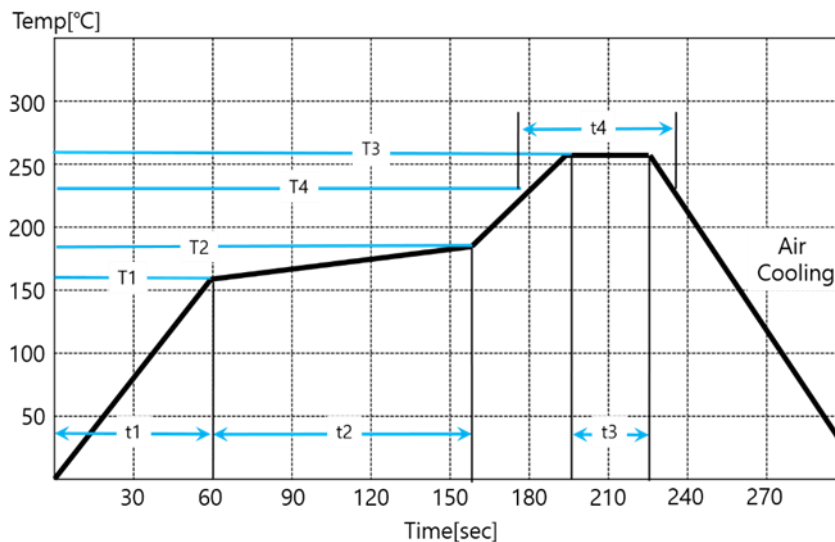


Figure 12. Thermal Reflow Profile

	Ramp Up	Pre-Heating	Peak	Soaking
Temperature(°C)	T1:160±5	T2:180±5	T3:260±5	T4:230±5
Time(sec)	t1:60±5	t2:100±15	t3:30±5	t4:60±10

14. PACKAGING AND ORDERING INFORMATION

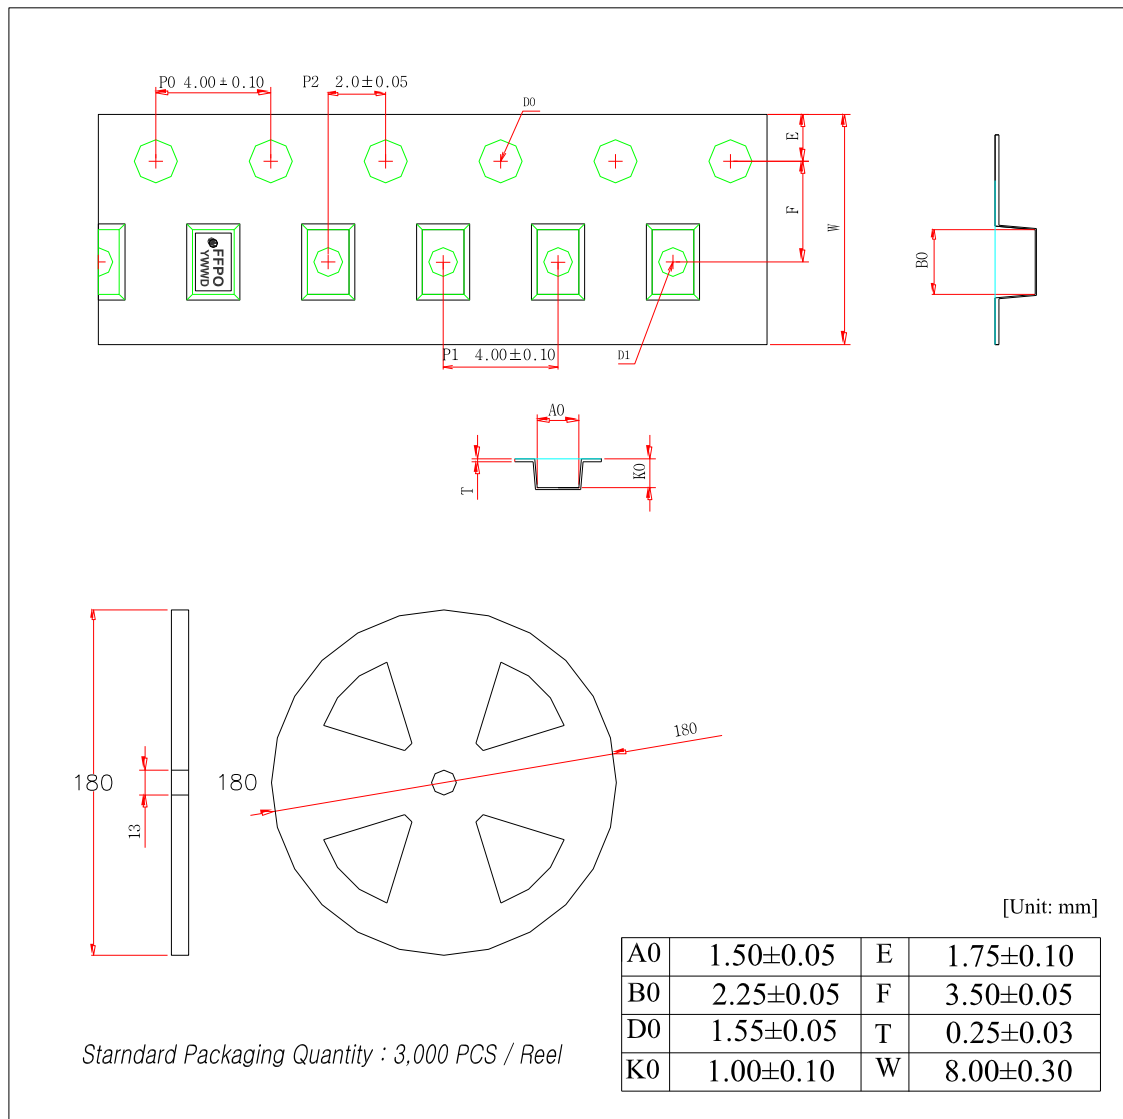

15. HANDLING GUIDE

PLEASE READ THIS NOTICE BEFORE USING OUR LTCC DIVIDERS.

I. Be careful when transporting

- Ensure proper transportation as excessive stress or shock may damage LTCC dividers due to the nature of ceramics structure.
- LTCC dividers cracked or damaged on terminals may have their property changed.

II. Be careful during storage

- Store LTCC dividers less than temperature +30°C.
- Keep the humidity at 45% to 75% around LTCC dividers.
- Prevent corrosive gas (Cl₂, NH₃, SO_x, NO_x, etc.) from contacting LTCC dividers.
- It is recommended to use LTCC dividers within 6 months of receipt. If the period exceeds 6 months, solderability may need to be verified.

III. Be careful when soldering

- Solder all the ground terminals, IN and OUT pad of LTCC dividers on the ground plane of the PCB.
- LTCC dividers may be cracked or broken by uneven forces from a claw or suction device.
- Mechanical stress by any other devices may damage LTCC dividers when positioning them on PCB.
- Do not use dropped LTCC dividers.
- Ensure that any soldering is carried out by the condition of specification sheet.
- Do not re-use LTCC dividers which are de-soldered from PCB.

16. LEGAL INFORMATION

Information in this document is believed to be accurate and reliable. However, RN2 Technologies does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. RN2 Technologies does not take any responsibility for the content in this document if provided by an information source outside of RN2 Technologies.

RN2 Technologies reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

RN2 Technologies products are not authorized for use in safety-critical applications (such as life support) where a failure of the RN2 Technologies products would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of RN2 Technologies products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by RN2 Technologies. Further, Buyers must fully indemnify RN2 Technologies and its representatives against any damages arising out of the use of RN2 Technologies products in such safety-critical applications.

RN2 Technologies does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products. Customer is responsible for doing all necessary testing for the customer's applications or products using RN2 Technologies products in order to avoid a default of the applications and the products. RN2 Technologies does not accept any liability in this respect.

RN2 Technologies

For more information, refer to:

[HTTP://WWW.RN2.CO.KR](http://www.rn2.co.kr)